


SHAD


DUCATI DIAVEL 1200 '14
DODV14IF

3P
SYSTEM

DESIGNED IN
BARCELONA

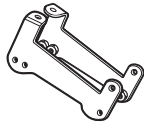

1 261881 x1 →
261882 x1 ←

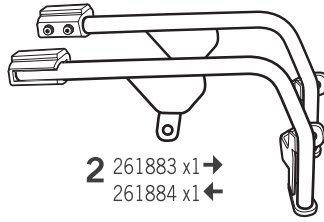

2 261883 x1 →
261884 x1 ←



3 303020 x8
Ø8



4 304028 x8
M8 x 25 Din 7380

! WARNING!

GB

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

E

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

D

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

I

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

F

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

